

MATTRESSPOINT

Creating a better tomorrow all night, every night

FOUR OKIN MOTORS MASSAGE ADJUSTABLE BED Deluxe Model Installation & Operation



Model:KFT-410

Norm Randazzo
Phone 0404 494 985
Email norm@mattresspoint.com.au
mattresspoint.com.au

All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.

A.



AA Batteries (2)

B.



Adjustable Legs

C.



Power Supply (1)

D.



Power Cord (1)

E.



Remote Control (1)


F.



Retainer Bar (1)
Attached to the bed frame

ADJUSTABLE POWER BASE ELECTRONICS QUICK REFERENCE GUIDE

WIRELESS OVERVIEW

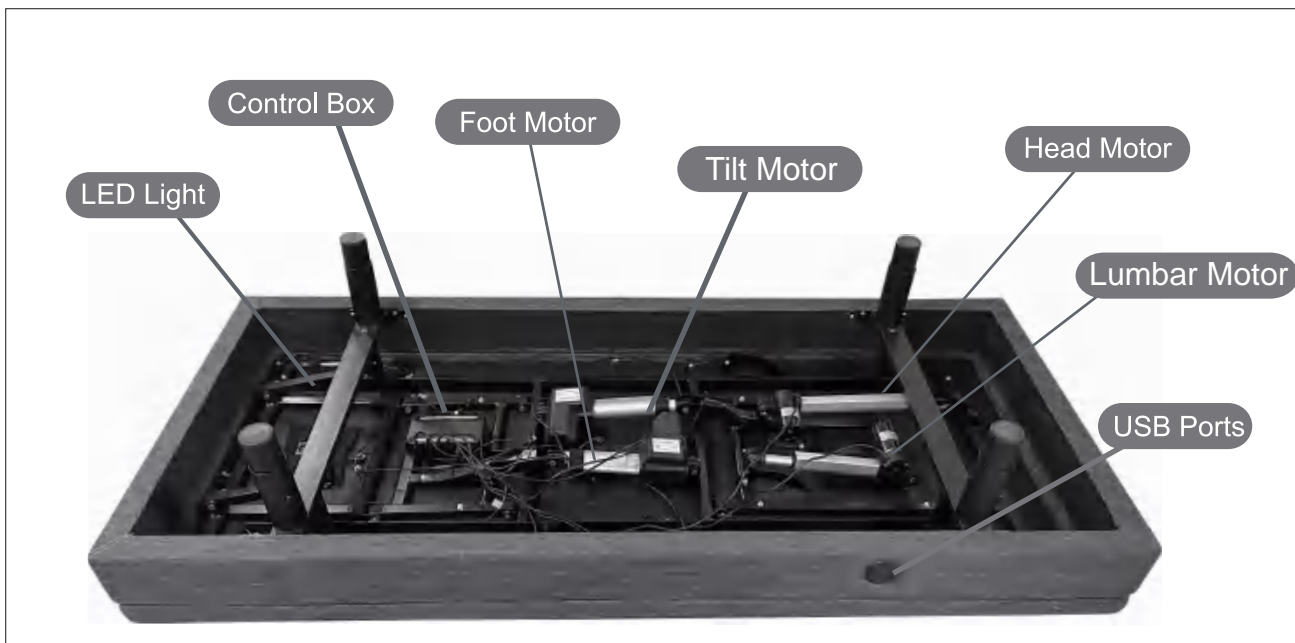

OPEN THE PACKAGE

For safety reasons, lifting of the adjustable bed frame must be performed by two (2) people; and the unit should always be in flat position before opening




Take the bed frame unit out of the shipping carton carefully, and then put it on the Flat floor.



Lower the head and foot frame pieces with their top side facing downward.

ATTACHING THE BED LEGS

Remove the six (4) bed legs from the accessory box. Hand tighten the legs by threading them clockwise into the pre-threaded holes on the bed frame.

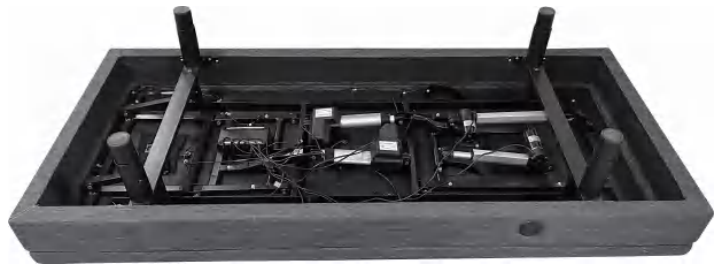

INSTALLING THE RETAINER BAR



STEP 1

Turn the bed frame over carefully, top side up.

STEP 2

Insert the ends of the retainer bar into the quick connect brackets located at the foot of the bed.

Setting up the electronics



STEP 1

Take out the power supply and the power cord from the accessory box.

STEP 2

Connect the power supply lead from the control box to the power supply.



STEP 3

Connect the power cord that was packaged with the power supply to the power supply.



STEP 4

Plug the power cord into a working electrical outlet. The LED lights under the base will flash for 10 seconds.




STEP 5

Install the two (2) AAA batteries into the remote control.




STEP 6

Confirm the remote control works by pressing the lift buttons. Installation for single or independent operation of the bed frame is now complete.

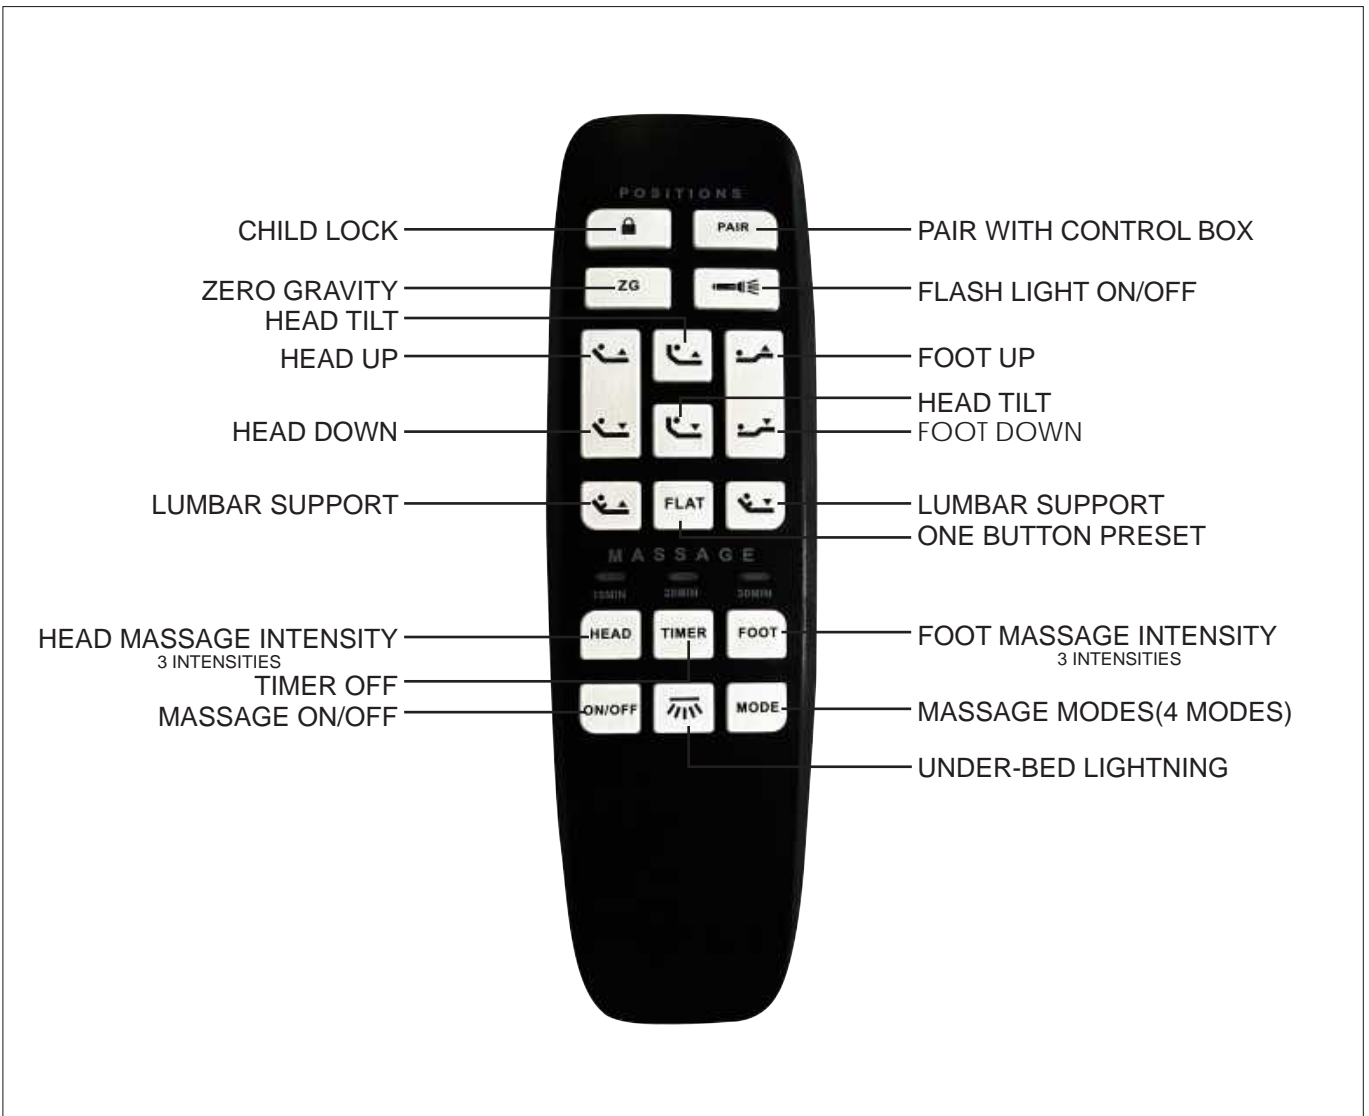



WIRELESS REMOTE








ADJUST

-  The **HEAD** up and down
-  The **FOOT** up and down
-  Press and hold the button, flash light will be on.

ONE TOUCH BUTTONS

-  One touch **ZG** preset position.
-  One touch **FLAT** preset position.
-  One touch under bed LED light on/off.
-  One touch press to lock/Hold 5 seconds to unlock.

MESSAGE FEATURE

-  The button will turn on the head massage.
-  The button will turn on the foot massage.
-  The button will let you choose between the 3 massage settings.
-  Massage ON/OFF
-  The light indicates a 10,20 or 30 minutes timer setting.

SETTING PROGRAMMABLE POSITIONS

The wireless power bed has a programmable feature that allows you to save custom positions. Please read all the instructions below before setting your custom presets on the remote.

STEP 1

Adjust the head and foot to your desired position.



STEP 2

PAIRING REMOTE

The original remote that comes in the box is already paired to the foundation. No further action is required. In the event that the remote is not paired with the foundation, follow the steps below.



STEP 1

Make sure the batteries work fine. Replace them when needed.



STEP 2

Plug the power cord to the power source.




STEP 3

Unplug and plug power cord into power source. Immediately press and hold the "PAIR" button for 5 seconds - lights will flash then stop. Remote is now paired.



EMERGENCY POWER DOWN

Your adjustable bed frame comes with a power supply that, when powered with two new 9V batteries, supports the emergency power down feature. If a power failure occurs while the head and/or foot sections are raised, do the following:

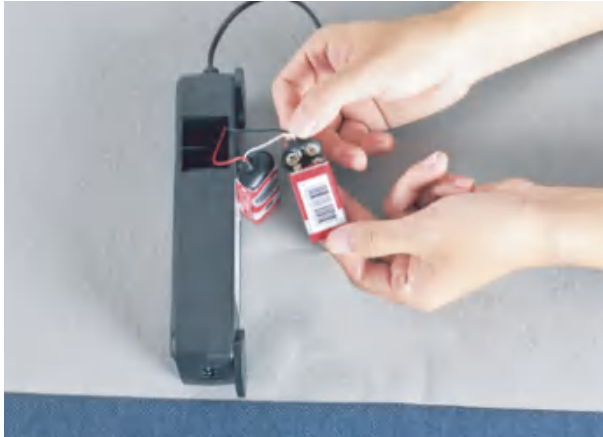

STEP 1

Install two (2) new 9V batteries in the battery compartment of the power supply.

STEP 2

Press the flat position on the remote if there is no power from the electrical outlet.

STEP 3

Replace the two (2) 9V batteries after this procedure. The 9V batteries (not included in the box) are for single use only.

SYNCHRONIZING TWO BED (OPTION)

If simultaneous operation of two foundations is desired, please read the instructions.


STEP 1

Plug A and B bases to power source.




STEP 2

Plug the synchronizing cable into 2 control boxes of 2 bases.

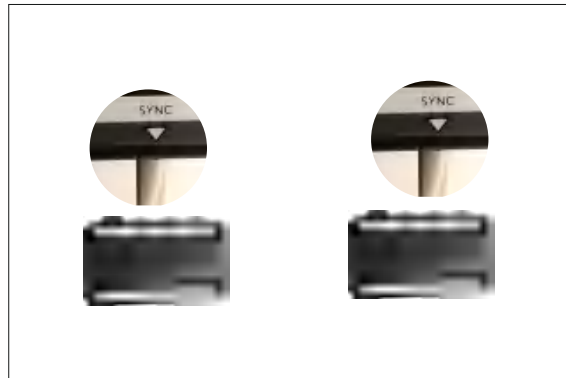

STEP 3

Then base A and B can be simultaneous operated by Remote A.

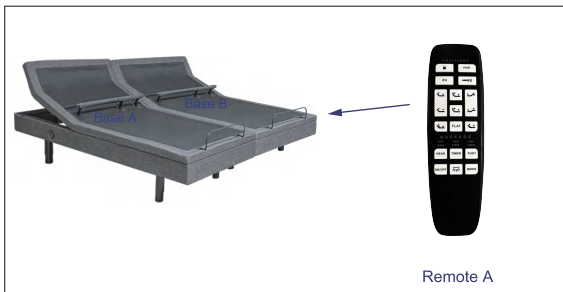

Remark : If you don't need Synchronizing just remove the Synchronizing cable.

Note: Synch cord is included with Twin Long Bases only.

A decorative graphic consisting of a thick, light green diagonal band that starts from the top left and extends towards the middle right. A vertical green bar of the same color runs along the right edge of the page.

**FOUR OKIN MOTORS
MASSAGE ADJUSTABLE BED**
Deluxe Model